

Technical Data

Light fitting for indoor use only

Power Factor: 1

 
Bulb to be used:

MERCER MINI


E12 TYPE G16.5 40W 

E12 LED TYPE G16.5 5W 

MERCER M

E26 TYPE A19 100W 

MERCER

E26 TYPE A21 100W 

It is recommended that a professional electrician be responsible for installing the light.

Warning: If the wire or flexible cord is damaged, it must only be changed by the manufacturer, their Service Dept. or qualified personnel in order to avoid risk.

Cleaning Instructions

Use a soft damp cloth, with soap or neutral detergent. Do not use alcohol or other solvents.

Datos Técnicos

Luminaria para uso interior

Factor de Potencia: 1

 
Lámpara a utilizar:

MERCER MINI


E12 TYPE G16.5 40W 

E12 LED TYPE G16.5 5W 

MERCER M

E26 TYPE A19 100W 

MERCER

E26 TYPE A21 100W 

Se recomienda que la instalación sea realizada por un profesional.

Aviso: Si el cable flexible o cordón de esta luminaria está dañado, deberá sustituirse exclusivamente por el fabricante o su servicio técnico o una persona de cualificación equivalente con objeto de evitar cualquier riesgo.

Instrucciones para la limpieza

Utilizar un paño suave, humedecido con agua y detergente neutro si fuera necesario. No utilizar alcohol o otros disolventes.

Dry location only

This symbol on the product or its packaging indicates that it must not be treated as household waste. It should, in fact, be handed in at a recognised collection point for recycling electrical and electronic equipment. For more detailed information about the recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



 
Este símbolo en su equipo o embalaje indica que el presente producto no puede ser tratado como residuo doméstico normal, sino que debe entregarse en el correspondiente punto de recogida de equipos eléctricos y electrónicos. Para recibir información detallada sobre el reciclaje de este producto, por favor, contacte con su ayuntamiento, su punto de recogida más cercano o el distribuidor donde adquirió el producto.

120 V - 60 Hz


marset 

MERCER, MERCER M & MERCER MINI

Assembly Instructions / Instrucciones de Montaje

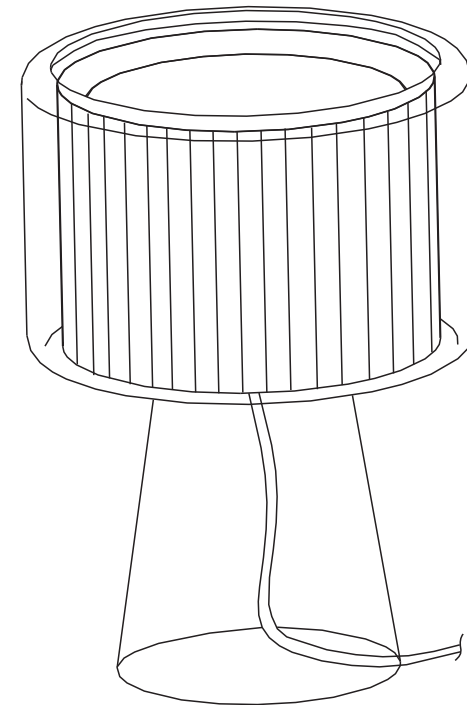

marset

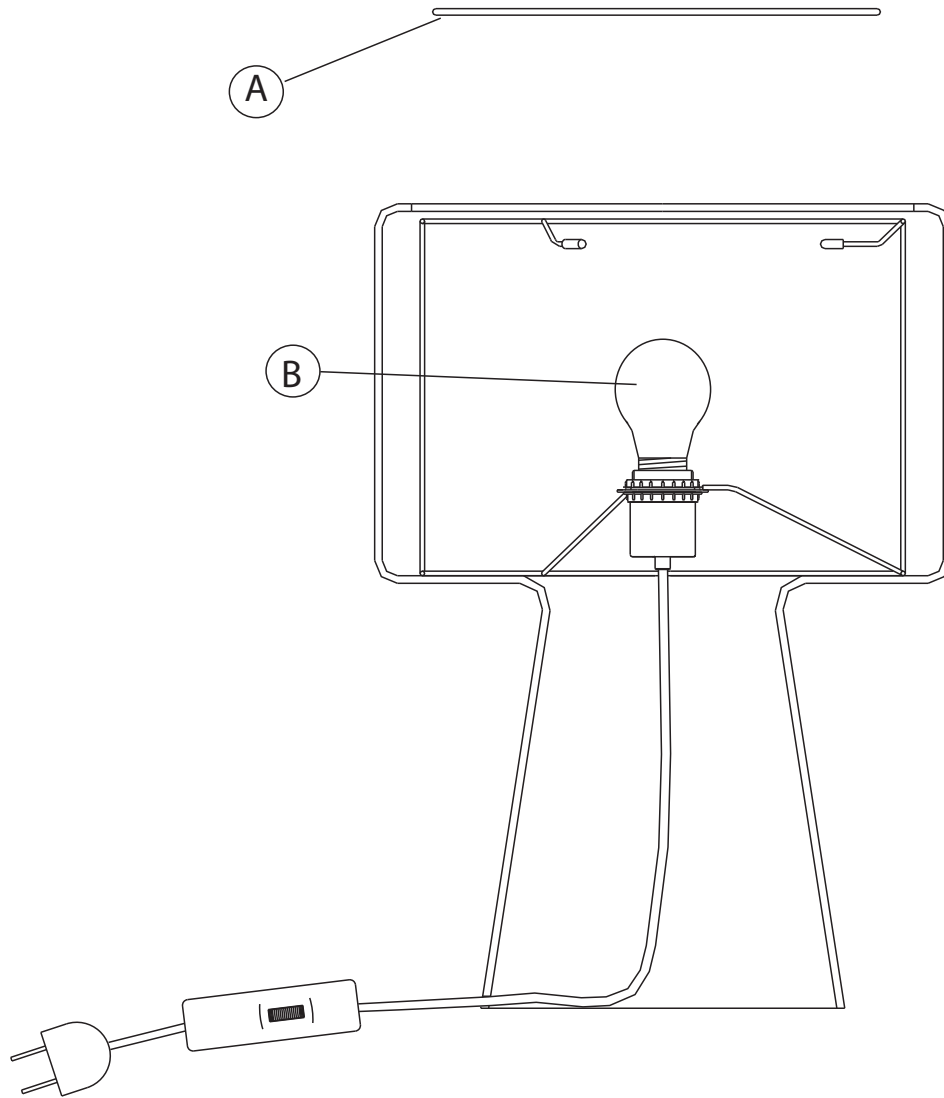 

Changing the bulb / *Cambio bombilla*

1. Raise the glass cover (A) to reach the bulb (B) and change it.
2. Replacethe glass cover (A)

1. *Levantat el cristal (A) para acceder a la bombilla (B) y realizar el cambio.*
2. *Volver a colocar el cristal (A).*

IMPORTANT SAFETY INSTRUCTIONS:

 
1. Read all instructions completely before beginning installation. Keep these instructions in a safe place for future reference.
2. Connect this product only to a 120V 60 Hz electrical supply.
3. Replace lamp only with the lamp labeled on the fixture or listed on the spec sheet.

Warning!

Disconnect power supply before installation and change the bulb only when cold.

Atención!

Desconectar la conexión a red antes de ser manipulada y realizar el cambio de bombilla sólo cuando ésta se haya enfriado.

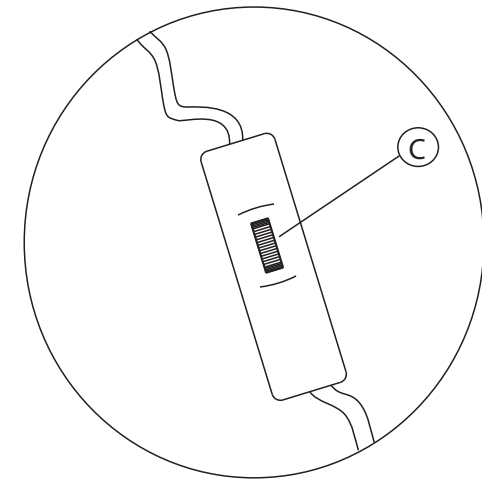

Use of the dimmer switch / *Encendido y apagado progresivo*

To switch the apparatus on and off, as well as varying the intensity of the light, turn wheel (C) gently.

*N.B. The Mercer Mini does not have a dimmer switch.

Para encender, apagar y graduar la intensidad de luz de la luminaria, girar la rueda (C).

*Nota: Mercer Mini no incorpora el sistema de encendido y apagado progresivo.